





Wrap-n-Snap Base/Cap Instructions

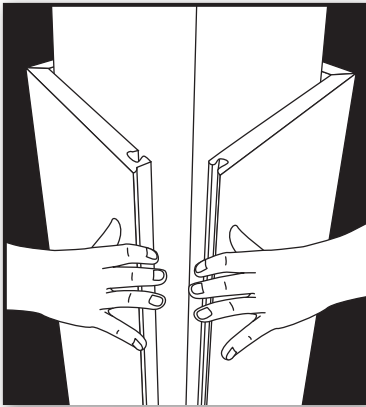

1

Cut the Wrap n Snap Base / Cap to the desired length.


Apply a bead of PVC adhesive to all four corners, leaving the temporary tape on during installation.

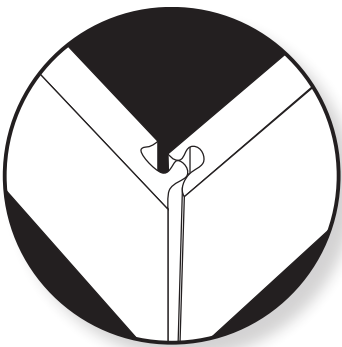

2

Wrap the Base / Cap around the column and close the patented locking system on the fourth corner.

Remove the temporary tape after the PVC adhesive has set, usually the next day. A longer delay may result in difficulty in tape removal.

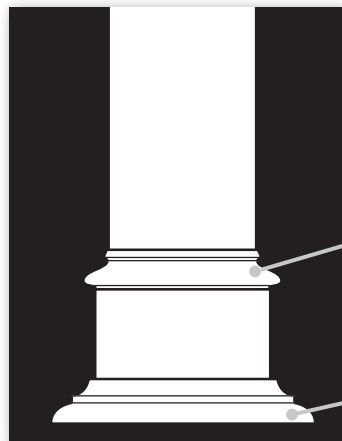

3

The Base Molding may be attached to the top edge of the Wrap n Snap Base / Cap or the Bead Molding, XL at the bottom with PVC adhesive or finishing nails.

Base Molding

Bead Molding, XL